





134 Sand Park Road  
Cedar Grove, NJ 07009  
Phone: 973 857-6480 Fax: 973 857-4943  
E-Mail: Sales@radiantwraps.com  
Web Site: www.radiantwraps.com

## **BAY WINDOW CORNER TOOL MEASURING INSTRUCTIONS**

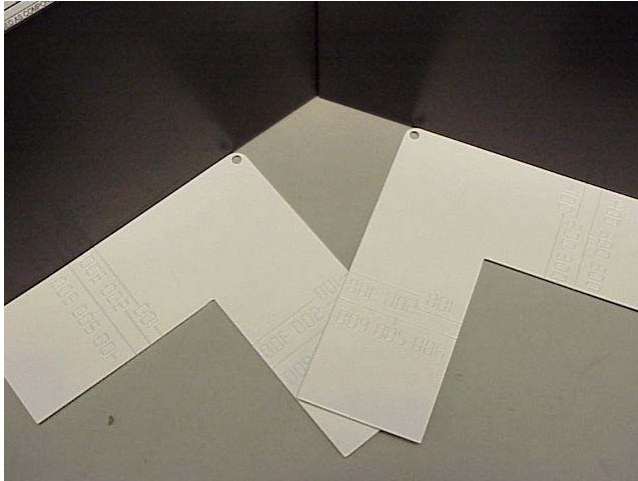


**THE CORNER MEASURING TOOL MUST BE ORDERED FROM RADIANT WRAPS**

**#1** – Place measuring gauge corner tool on top rail of the existing baseboard enclosure or on the floor if the enclosure is missing. Slide the tool tight back to wall to create an inside wedge, as shown.

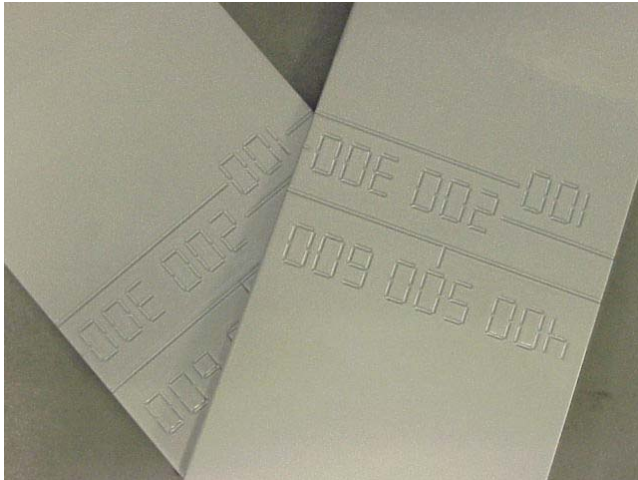

**#2** – Line up the corner tool markers based on the appropriate model series (as determined by Radiant Wraps). This photo illustrates the 100 Series markers.

100 Series = First line  
200 + 300 Series = Second line  
400, 500 & 600 Series = Third line

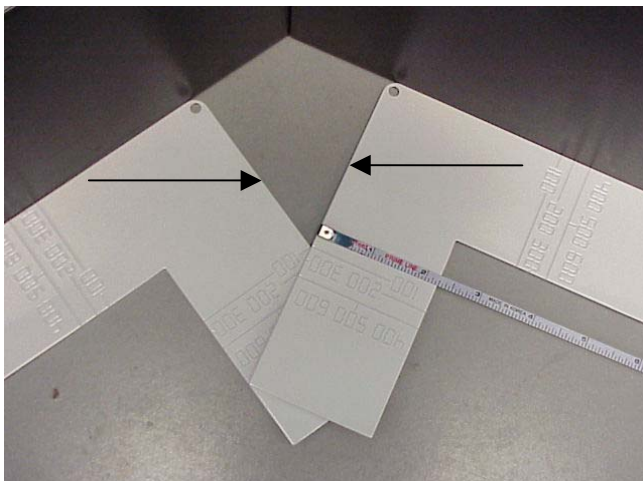

**#3** – Use pencil to mark the lines created by the wedge onto the top rail of the existing enclosure or on the floor if the enclosure is missing. All measurements will be taken from these lines.