



134 Sand Park Road
Cedar Grove, NJ 07009
Phone: 973 857-6480 Fax: 973 857-4943
E-Mail: Sales@radiantwraps.com
Web Site: www.radiantwraps.com

RECESSED PANEL INSTALLATION



#1 – Existing baseboard enclosure's back panel is recessed into the wall cavity.




#2 – Position Radiant Wraps panel on wall and mark sections where there are no teeth. Locate and install spacer board and mounting bracket.



#3 – Cut back top panel with metal snips and install spacer board and mounting bracket flush with the finished wall surface.



#4 – Install two mounting brackets for each panel.

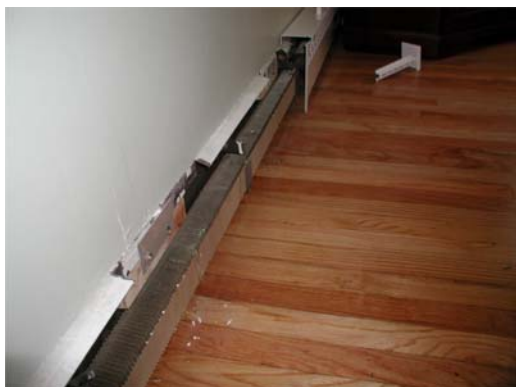

#5 – Section is now prepared for installation of Radiant Wraps panel.



#6 – Slide back flange of new panel down into mounting brackets.